


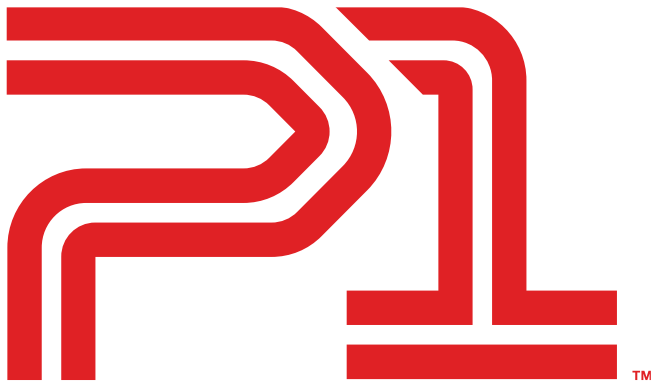

www.P1MFG.com



scan for more information



Point One's current and complete Terms & Conditions can be found at www.P1mfg.com/terms&conditions. You, as the Buyer understand that our Products may be used in extreme stress applications and installed by persons over whom we have no influence or control. Due to the nature of extreme stress applications, our Products are sold without any expressed warranty or any implied warranty of merchantability or fitness for a particular purpose. You, as the Buyer, have the sole responsibility for selection and specification of Products suitable for the intended use, even if you inform Point One of the intended use. Under no circumstances will our liability to the Buyer be greater than the cost of the Product purchased by the Buyer.

INSTALLATION METHOD

FOR HEAD BOLT KITS

Kit Number: K003-HB02E

Application: **Chevrolet
LS GEN 3 & 4, 2004 and
later, w/ all bolts same
length**



Point One, LLC

MAILING: PO BOX 677
ROGERSVILLE, MO 65742

SHIPPING: 11 WHITE OAK ROAD,
ROGERSVILLE, MO 65742

www.P1mfg.com

417-753-5174

Kit: K003-HB02E Alloy: E190 Sockets Required: 13mm, 10mm

KIT CONTENTS

(20) BA4E 6pt Flange Bolt, MJ11x2.0 x 103mm under head length, 13mm wrenching, black oxide finish

(10) BA8E 6pt Flange Bolt, MJ8x1.25 x 48mm under head length, 10mm wrenching, black oxide finish

(20) WA5T Chamfered Washer, 11mm diameter, black oxide finish

(10) WA2T Chamfered Washer, 8mm diameter, black oxide finish

LBO1 TORQUEPOINT Fastener Assembly Lube, 1oz packet

LBBR Lube application brush

FASTENER INSTALLATION

(NOTE: THIS PROCESS IS IDENTICAL TO WHAT WE DO DURING TORQUE-TENSION TESTING AT P1 HQ)

1. Inspect kit contents for damage and confirm quantities.
2. Thoroughly clean all debris from engine block holes and threads.
3. Ensure all mating deck surfaces and fastener bearing surfaces are flat, free of debris and dry of any cleaning related products.
4. Inspect all deck gaskets for damage, fitment, & suitability.
5. Remove WASHERS from packaging and remove rust preventative coating from all faces of the WASHERS, place on clean rag (petroleum-based solvent is recommended).
6. Remove remaining fasteners and place on clean shop rag, clean threads as required, (do not unnecessarily remove the rust preventative).

7. WITHOUT LUBE, washers, gaskets or heads, thread the bolts into their intended holes BY HAND ONLY until the bolt bottoms or thread run-out occurs (DO NOT USE TOOLS). Achieving smooth installation without tools is necessary. Remove fasteners and clean or repair threads if needed.
8. Remove the fasteners from their holes and liberally apply TORQUEPOINT assembly lube to the entire length of the threaded section of the fastener using included brush. Work the lube into the threads all the way around the threaded section so the lube is nearly flush with the outer diameter of the thread face.
9. To pre-lubricate the internal threads - install the bolts into their intended holes BY HAND ONLY until the bolt bottoms or thread run-out occurs (DO NOT USE TOOLS).
10. Remove all bolts from the block and place on clean rag. Wipe any excess thread lubricant from the block mating surfaces.
11. Apply TORQUEPOINT assembly lube and/or redistribute existing lubricant on the bolt threads to ensure all thread surfaces contain lubricant.
12. Apply TORQUEPOINT to each bolt's under head surface. **Do not apply any lubricant to the washers.** The washer should not rotate during fastener installation.
13. Fit the Head (and appropriate gasket) on block and install bolts with washers hand tight. **It is imperative that the chamfered side of the washer is "up" and mated against the under head of the bolt.**

TORQUE RECOMMENDATIONS

Follow applicable OEM and/or aftermarket manufacturers suggested torque sequence & number of tightening steps.

Point One fasteners, paired with TORQUEPOINT fastener assembly lube, can sustain the following nominal torques and clamp loads while remaining below their minimum proof load rating.

*****DO NOT EXCEED THESE TORQUE INPUT VALUES*****

*****THESE VALUES WILL NOT BE APPLICABLE WHEN USING OTHER LUBRICANTS*****

BA4E	MJ11x2.0 Bolt
Torque: 74 ft-lbs	
Typical Clamp Load: 11,400 lbs-force	
BA8E	MJ8x1.25 Bolt
Torque: 30 ft-lbs	
Typical Clamp Load: 6,250 lbs-force	

Note: The number of aftermarket replacement parts and OEM combinations of components is numerous. **Use caution as the clamp loads above may damage your assembly** - use lower installation torques such as those provided by the manufacturer of your components if applicable.